





Download the ICT Protege GX Mobile App from the App store or Google Play.

(Not to be confused with Protege Keypad app)



Protege Mobile

Protege Mobile

Protection

Launch the App and click on: Create new Account

Please enter your email as user name and a password then hit 'save'

After registration you will get a 'successfully registered' message

Go back and log in with the details you just created index.html Successfully Registered!

OK

"Protege Mobile" Would Like to Send You Notifications Notifications may include alerts, sounds and icon badges. These can be configured in Settings.

Allow

Don't Allow

Click don't allow for notifications

You will be prompted to enter a PIN. This PIN is used for security App log in and to alter settings at a later date – make it something to remember





Click on the dropdown menu and select how often you want to be prompted to enter the PIN

Select Always for the highest security setting

If selecting Never, please ensure your phone's security settings prohibit unauthorised access to your phone

After you have logged in you will be shown a short instructional list

> Click 'Got it' to be taken to the main pages menu

Click to acce	ss the Menu	
 Securit 	y Settings	
You can Reset PIN code frequeries prompted to en	your PIN code and/or Change the your vency - how often you want to be ner your PIN	
 Your M 	obile Credentials	
Your Mobile Cr	edential info and QR code	
🖬 My Pla	ices	
Add Places(Co and more	ntrollers) to access your Doors/Areas	
B Logout		
Logout from IC	T mobile app	



Then click on 'My Places'

Name = Site Name

External address = https://manage. visium.com.au

Internal address = https://manage. visium.com.au

<		
A Name		
🛎 Extern	al Address	
🛎 Interna	al Address	
(D) Usern	ame	
Passw	ord	
Push Not	fications	0

User name = firstname.lastname (Same as the https://manage.visium.com.au website username)

> Password = (Same as the https://manage.visium.com.au website password)

After the app connects to the Visium cloud, you are good to go.

The My Places menu briefs you on the controls.

This is where you can open doors and arm/disarm areas and view the status of sensors or zones.

IMPORTANT NOTE:

Clicking and holding on a door will unlock latch the door.

Only to be used where you want to leave a gate/door permanently unlocked.

